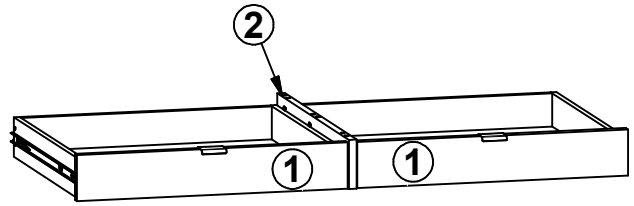
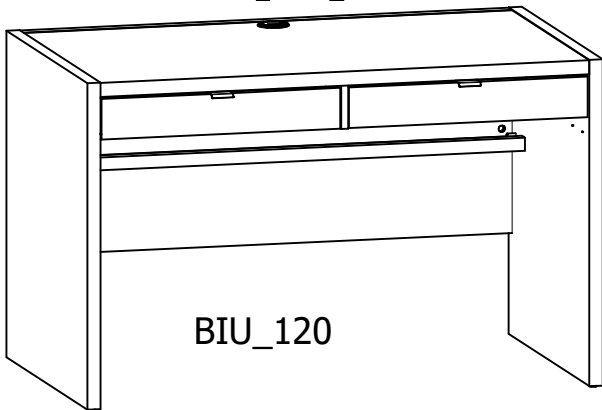
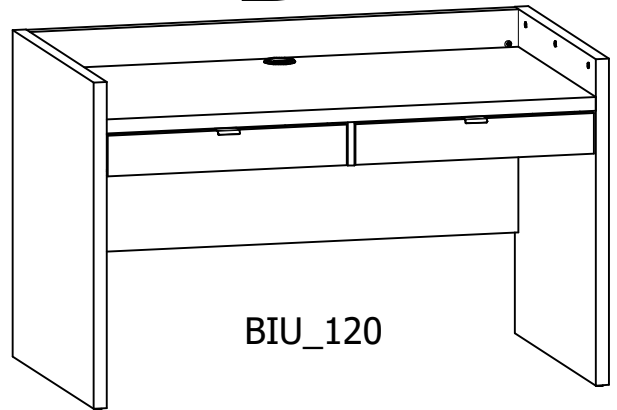


**A****PRINCETON****S406-SZU/BIU**










A	B	C	D	
1	S406-0001	556	93	1/2
2	S406-1003	550	99	1/2
3	S406-5001	500	80	1/2
4	S406-5002	500	80	1/2
5	S406-5003	515	80	1/2
6	S406-9001	525	501	1/2

**A**







BIU\_120

**B**












BIU\_120

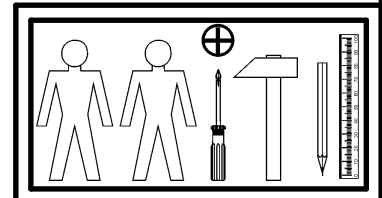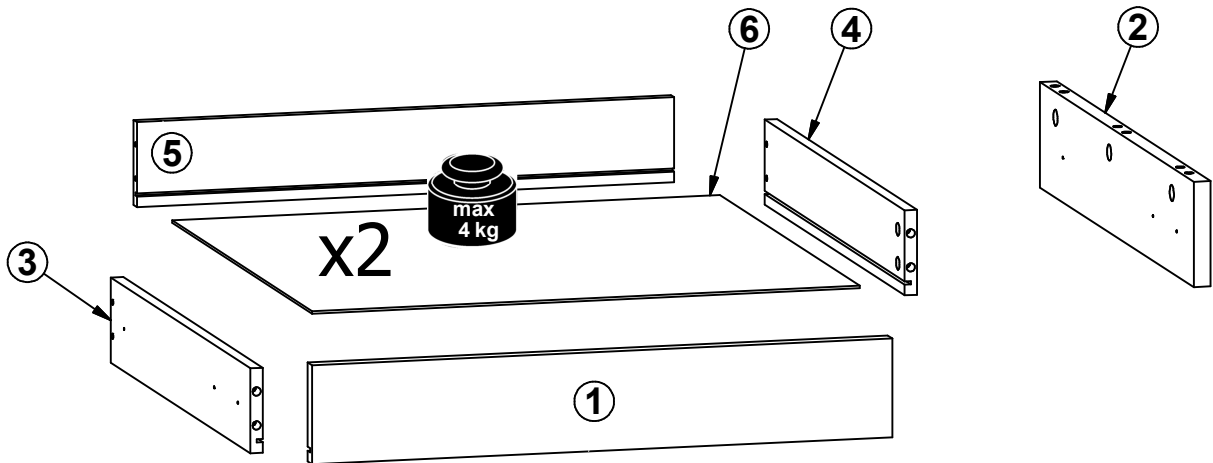

# 1

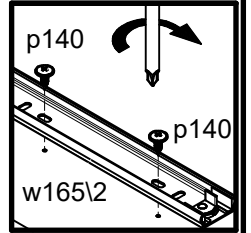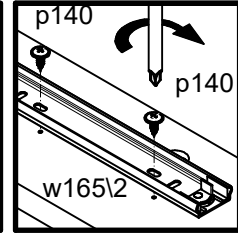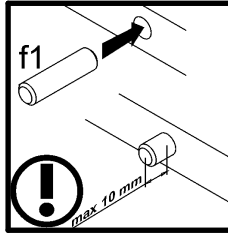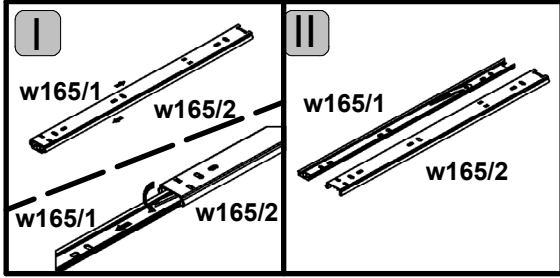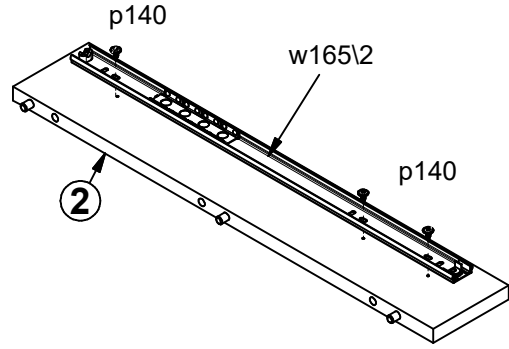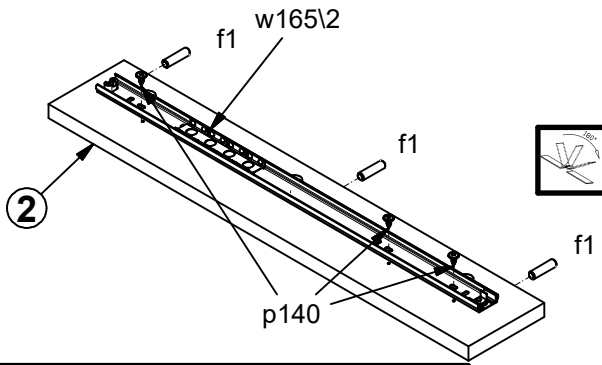





# 2

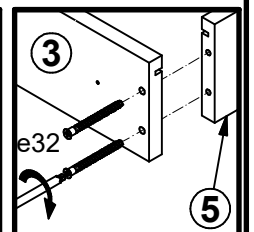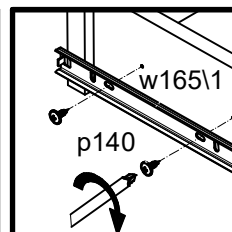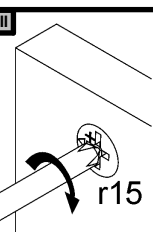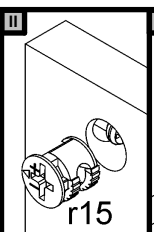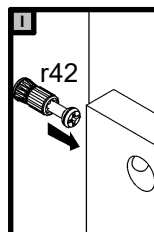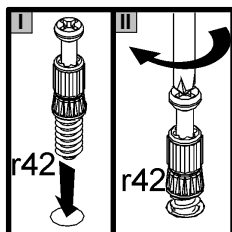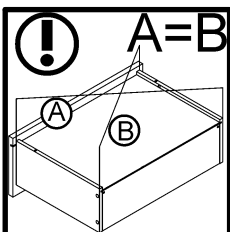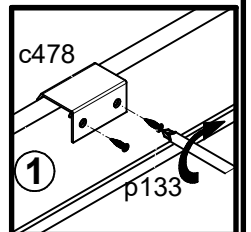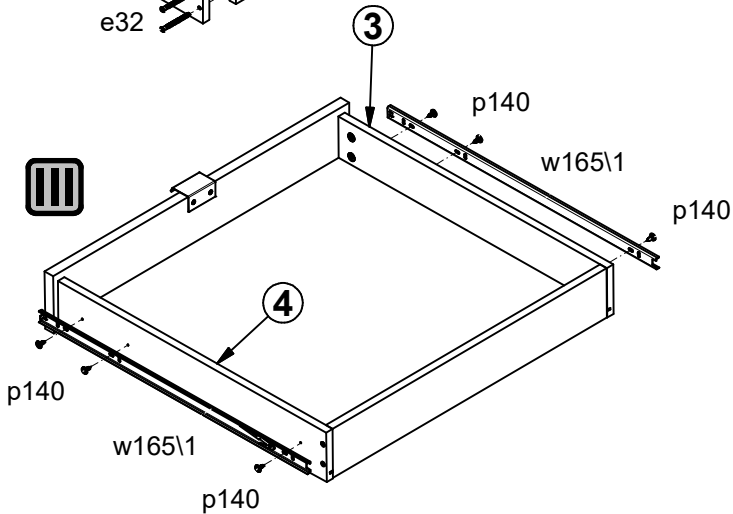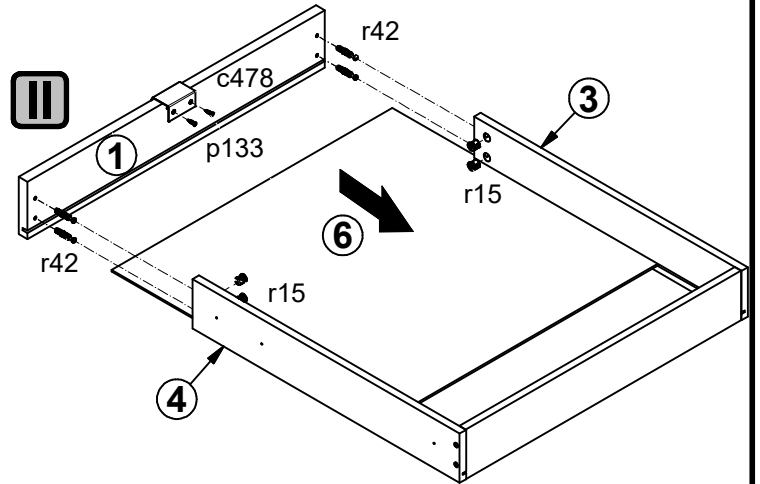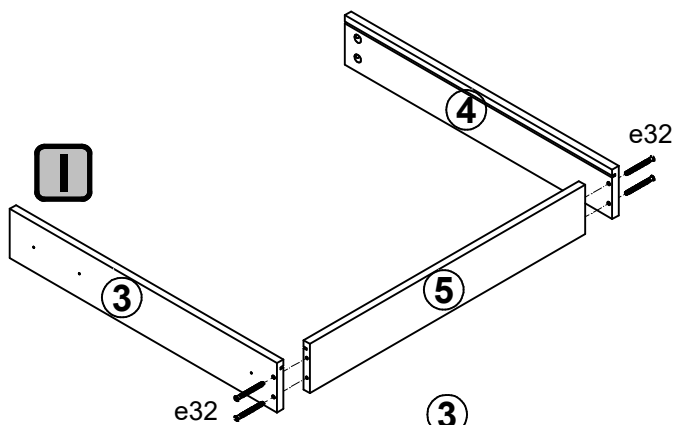

# 3







# A

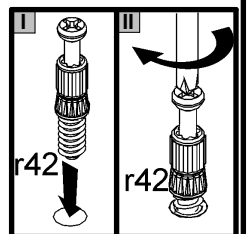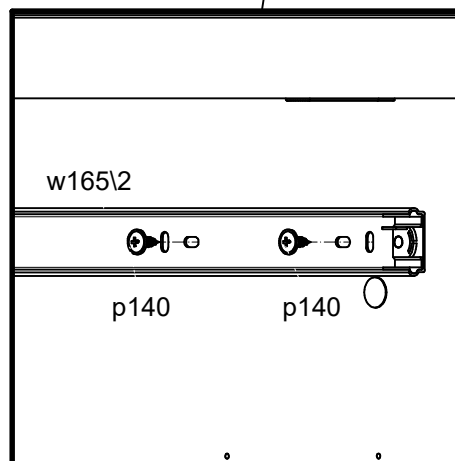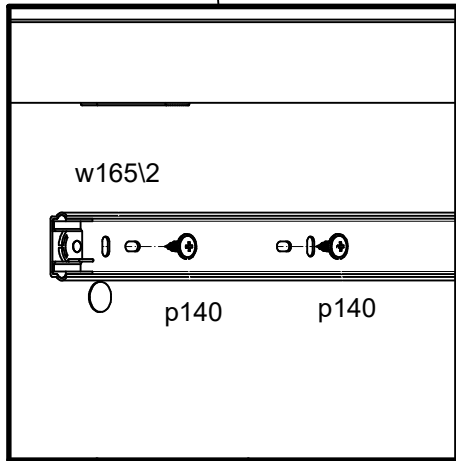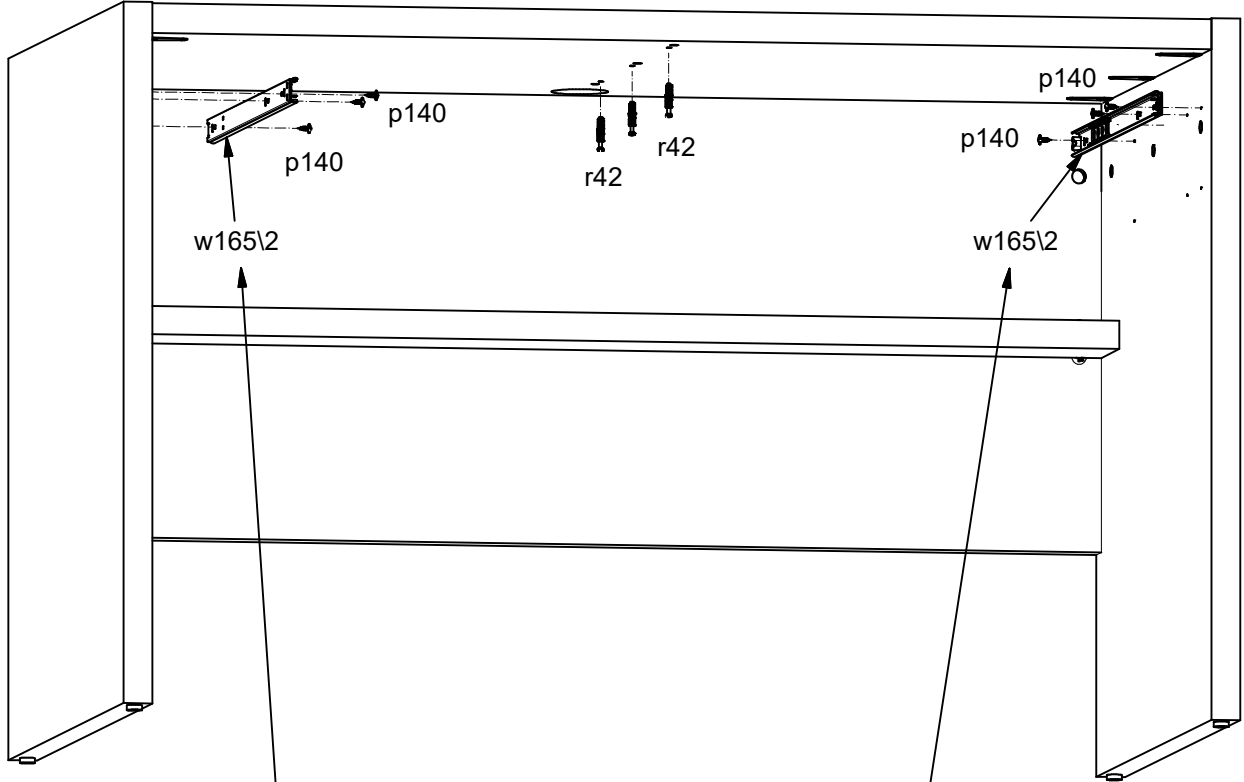

4  §14

B

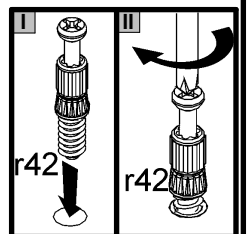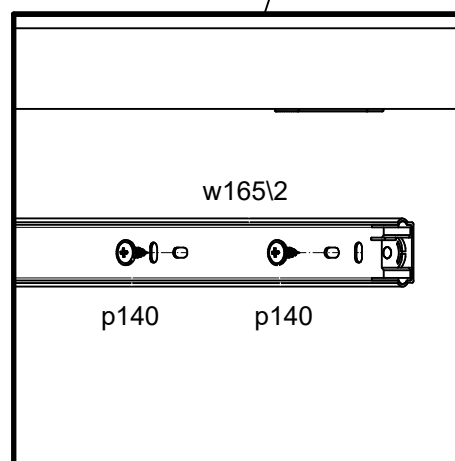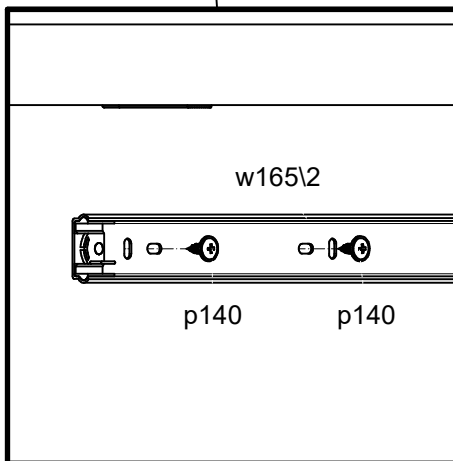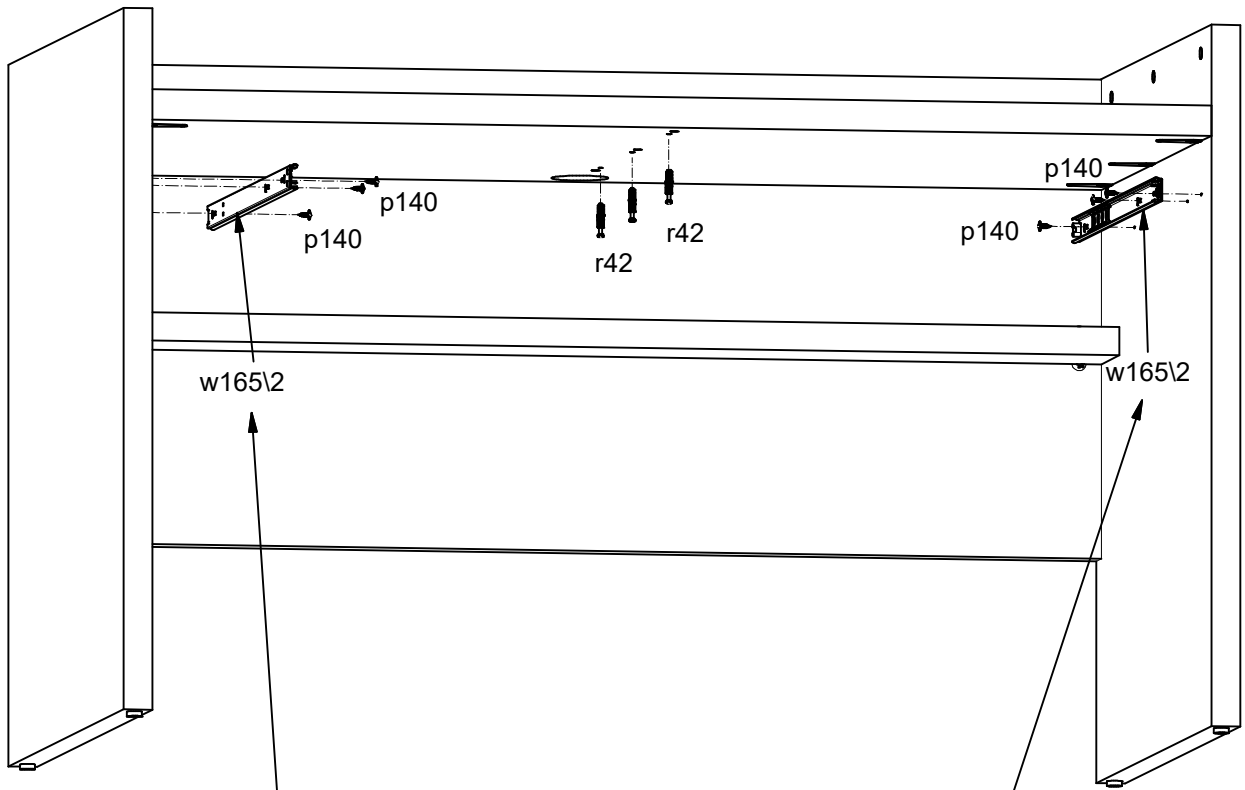


# 5




# A

I

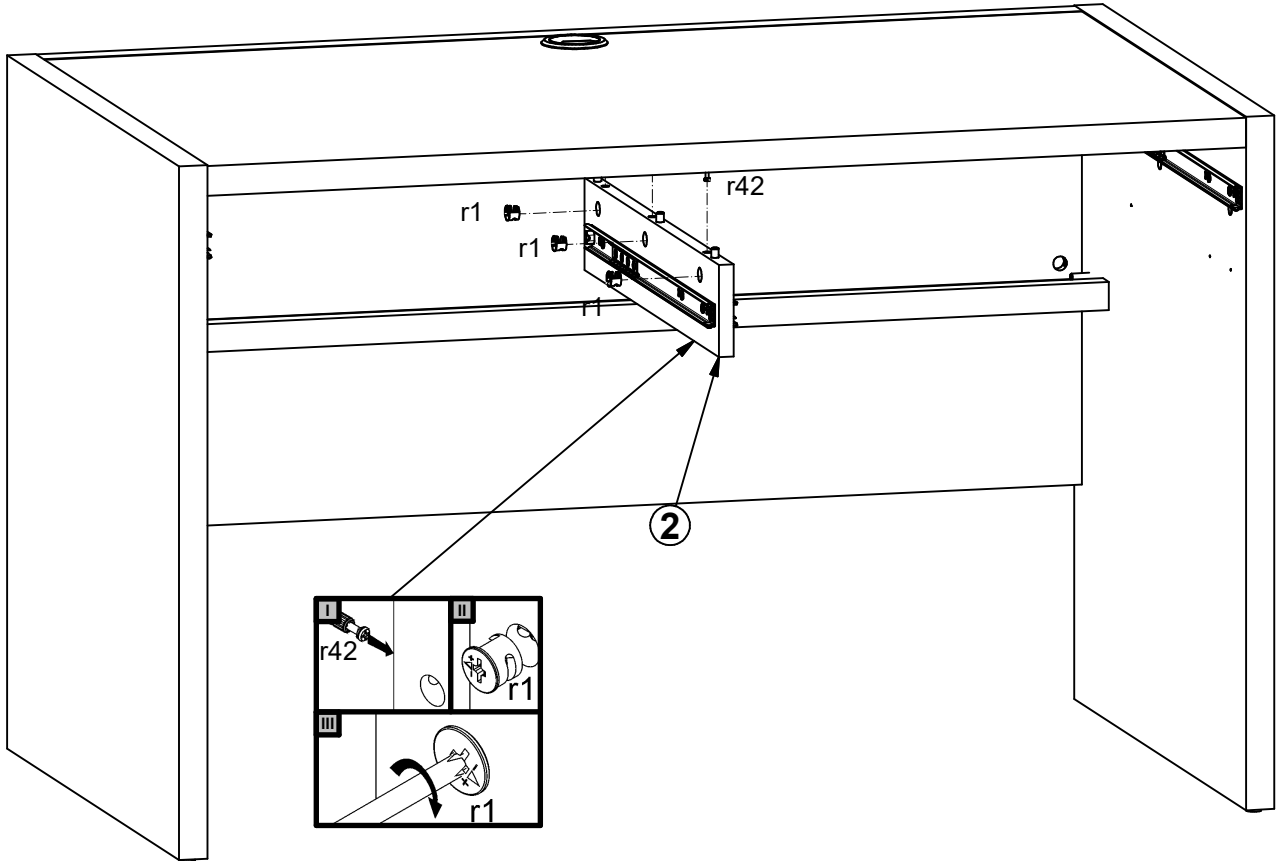


II

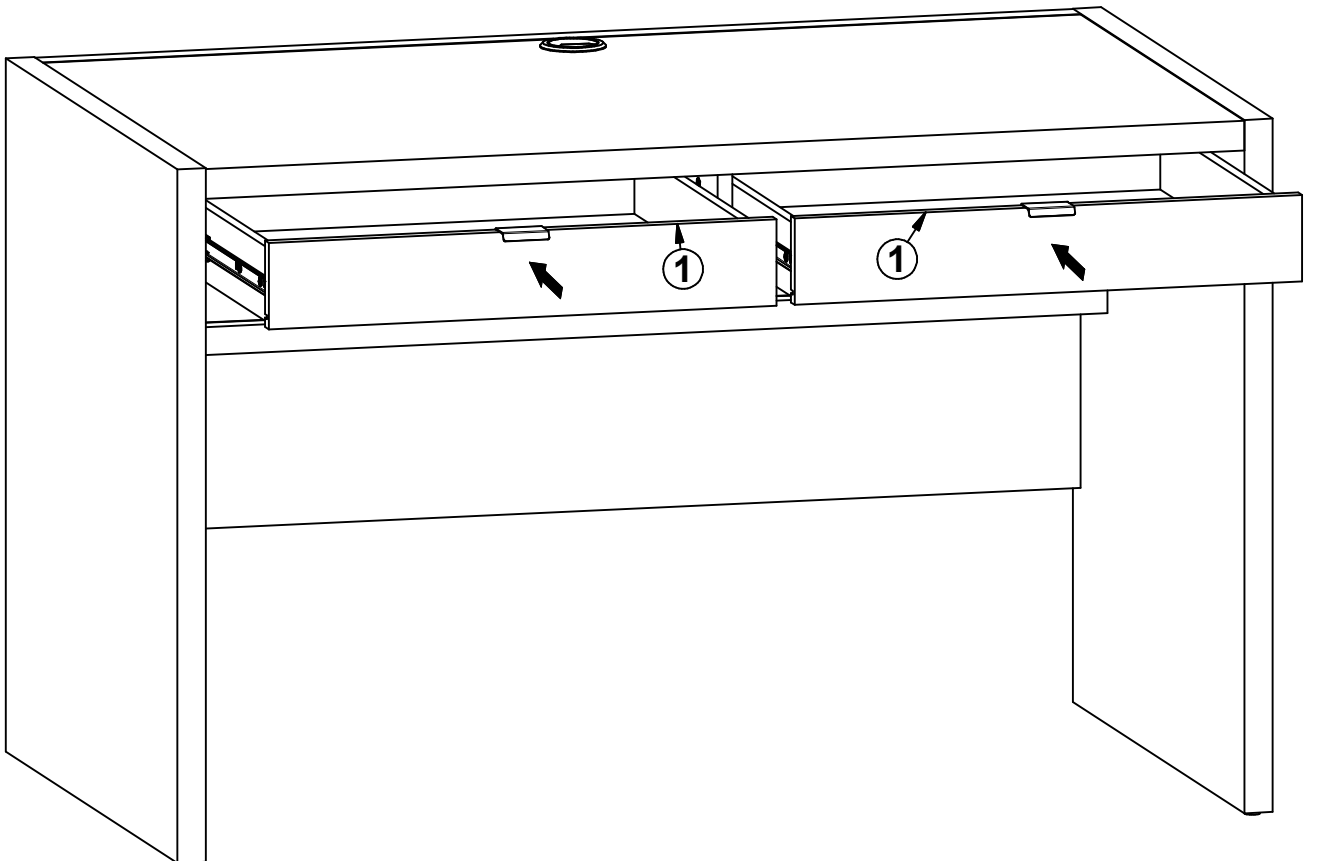

# 6 B

I

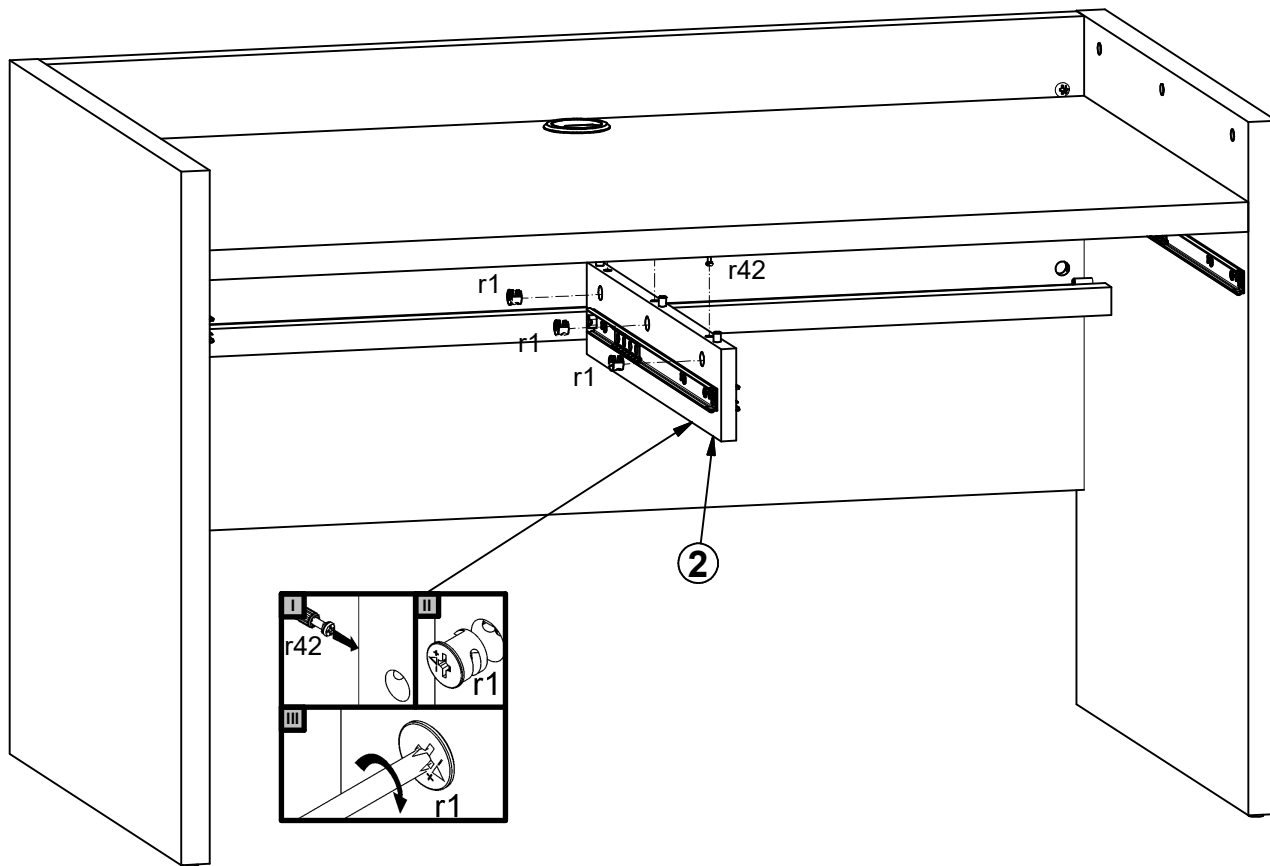

II

